

Quick Start Instructions:

Please see pg. 5 for important buttons and controls

1. Place 3 AA alkaline batteries (not supplied) into the compartment on underside of radio.
(Note: Batteries are important because they provide emergency power for the radio in case of a power outage.)
2. Plug the AC Adapter into a standard house outlet. Plug the other end of the adapter into the DC jack on the back of the radio.
3. Pull out antenna and extend to its full length above the weather radio.
4. Ensure the radio's weather mode is on by clicking the switch on the right side of the radio to "ON".
5. Program the Weather/Hazard Channel for your Area-
 - (A). Turn switch on side of radio to "ON".
 - (B). Press "MENU".
 - (C). Press "UP" arrow until "CHANNEL" is displayed.
 - (D). Press "SELECT".
 - (E). Press "UP" arrow until you hear the broadcast of your station **CHANNEL 1**.
 - (F). Press "SELECT" to save station selection.
 - (G). Press "MENU" to close menu mode. To turn Weather/Hazard broadcast on again, press "WEATHER/SNOOZE".
6. Press the WEATHER/SNOOZE button to turn on the weather radio. Then press the "UP" or "DOWN" volume button to select desired listening level. (Note: Turning the volume all the way down [where no bars show] puts the radio into silent mode.)

You are now able to receive weather alerts for your area and surrounding areas. To narrow the alerts to just your county, see page 8 to program the S.A.M.E. code for your county into the radio. **Skip - S.A.M.E. Programming**

Choosing an Alert Type (DISPLAY, VOICE, OR TONE):

1. Press "MENU" button to open menu options.
2. Press "UP" arrow to scroll through menu options until "ALT TYPE" (Alert Type) is displayed, then press "SELECT" button.
3. Press "UP" arrow to scroll through the following (3) alert types: "DISPLAY", "VOICE", or "TONE".
4. Press "SELECT" to choose the Alert Type you want. **VOICE**
5. Press "MENU" to exit menu programming mode.

Alert Type	Description of Tone Pattern
DISPLAY	When the DISPLAY alert type is chosen, only a text alert will scroll on the display. There will be no audible alarm.
VOICE	When the VOICE alert type is chosen, the alert will sound for 8 seconds, then you will hear the voice of the weather broadcast for 5 minutes.
TONE	When the TONE alert type is chosen, the alert tone will sound for 5 minutes, or until you press any button except the "WEATHER/SNOOZE" button which toggles to the voice weather broadcast.